

FLAP VALVES

Operation

- When properly installed, the flap valve will swing open under direct pressure to release the outfall fluid and close when the direct pressure is relieved. The Troy Valve A2540 Flap Valve has a 10-degree inclined seating plane to ensure positive seating.

Maintenance

- Periodic inspection is recommended to determine that the flap disc remains free to swing open and that the bronze seats have not been damaged.

Installation

- Valve must be installed so that the bolt holes in the flange (125-lb. template) straddle the vertical center line. See drawing for diameter and quantity required.

Troy Valve.....simply the best.

TROY VALVE

A Division of Penn-Troy Manufacturing Inc.

Toll Free: (800) 232-4442 ■ sales@troyvalve.com

650 Railroad Street, Troy, PA 16947 ■ Ph: (570) 297-4442 Fax: (570) 297-4136