



360C RESTRAINER ASSEMBLY INSTRUCTIONS



1. Install pipe into the fitting per the pipe manufacturer's instructions. Place the 360C split ring behind the fittings gasket races clamping the halves together. Insert the restraining rods into each 360C split ring placing a nut on each rod behind the ring.

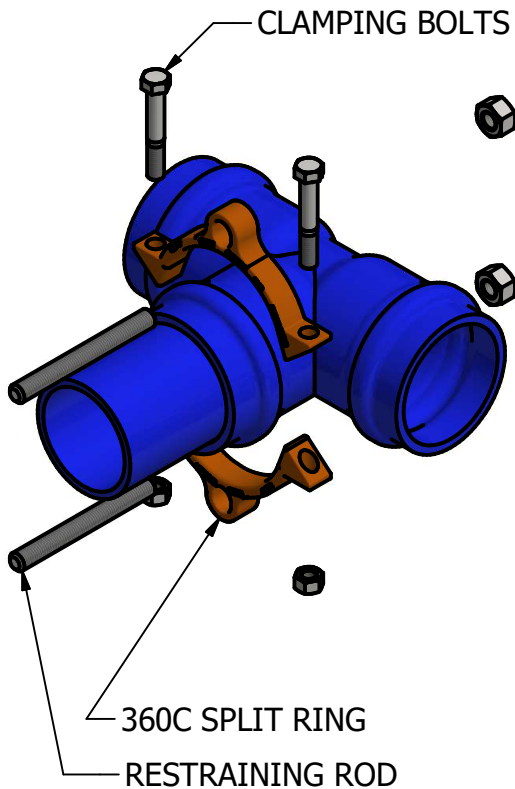


2. Use the restraining rod as a guide and position the 300C split clamp on the pipe. Place hex head clamp bolts through clamp ears insuring bolt end threads are exposed. **DO NOT TIGHTEN CLAMP BOLTS, LEAVE LOOSE.**

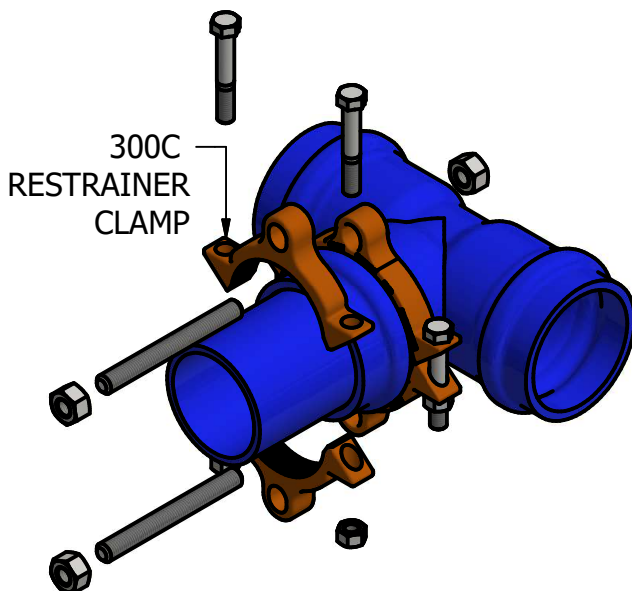

3. Align the restraining rods and insure equal threads are beyond the 360C ring and the 300C clamp. Tighten the clamping bolts and nuts insuring equal gaps exist between the two halves. Torque clamping bolts to the following torque requirements:


4" - 6"	clamps (100 ft-lbs)
8"	clamps (150 ft-lbs)
10" - 12"	clamps (200 ft-lbs)

4. Complete the installation by tightening the restraining rod nuts until snug.

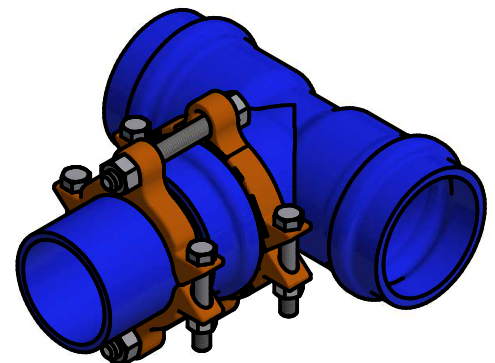

CLOW CANADA


INSTRUCTIONS D'ASSEMBLAGE – COLLET DE RETENUE 360C

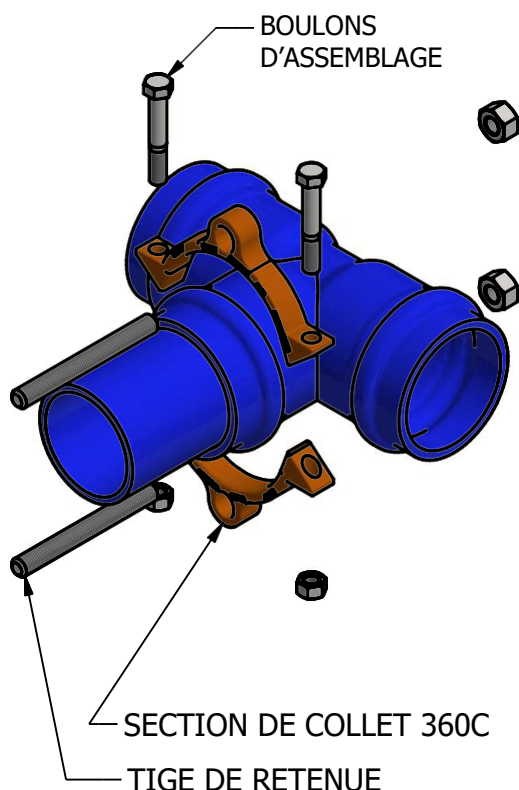

1. Installer le tuyau dans le raccord conformément aux instructions du fabricant du tuyau. Placer le collet de retenue 360C derrière la cloche du raccord en serrant les deux moitiés ensemble. Insérer les tiges de retenue dans les oreilles de chaque section du collet 360C en plaçant un écrou sur chaque tige derrière le collet.



2. Utiliser la tige de retenue comme guide et positionner la section de collet 300C sur le tuyau. Insérer les boulons à tête hexagonale dans les oreilles du collet en veillant à ce que les filets des extrémités des boulons soient visibles. **NE PAS SERRER LES BOULONS, LAISSEZ-LES DESSERRÉS.**

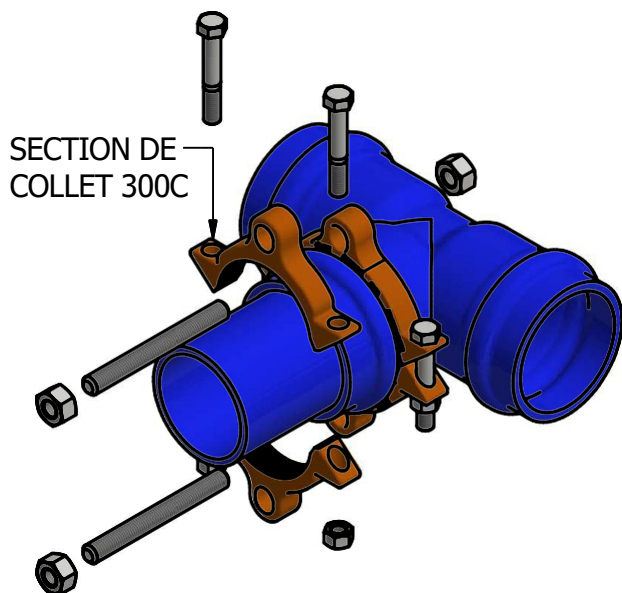

3. Aligner les tiges de retenue en s'assurant que le même nombre de filets dépassent de la section 360C et de la section 300C. Serrer les boulons d'assemblage en respectant un espace égal et constant entre les deux sections. Serrer les boulons d'assemblage au couple prescrit :

4" - 6"	(100 pi-lb)
8"	(150 pi-lb)
10" - 12"	(200 pi-lb)

4. Terminer l'installation en serrant les écrous des tiges de retenue jusqu'à ce qu'ils soient serrés fermement, sans excès.



CLOW CANADA